PARTS LIST

for

KitchenAid® PRO LINE 2 SLICE TOASTER

MODELS:

KPTT780PM1 (PEARL METALLIC)
KPTT780ER1 (EMPIRE RED)
KPTT780TG1 (TANGERINE)
KPTT780BU1 (COBALT BLUE)
KPTT780NP1 (NICKEL PEARL)
4KPTT780PM1 (PEARL METALLIC)
4KPTT780ER1 (EMPIRE RED)
4KPTT780TG1 (TANGERINE)




FOR CUSTOMER SATISFACTION ALWAYS USE FACTORY SPECIFICATION PARTS



KITCHENAID ST. JOSEPH MICHIGAN 49085

HOUSING PARTS

For Models: KPTT780__0

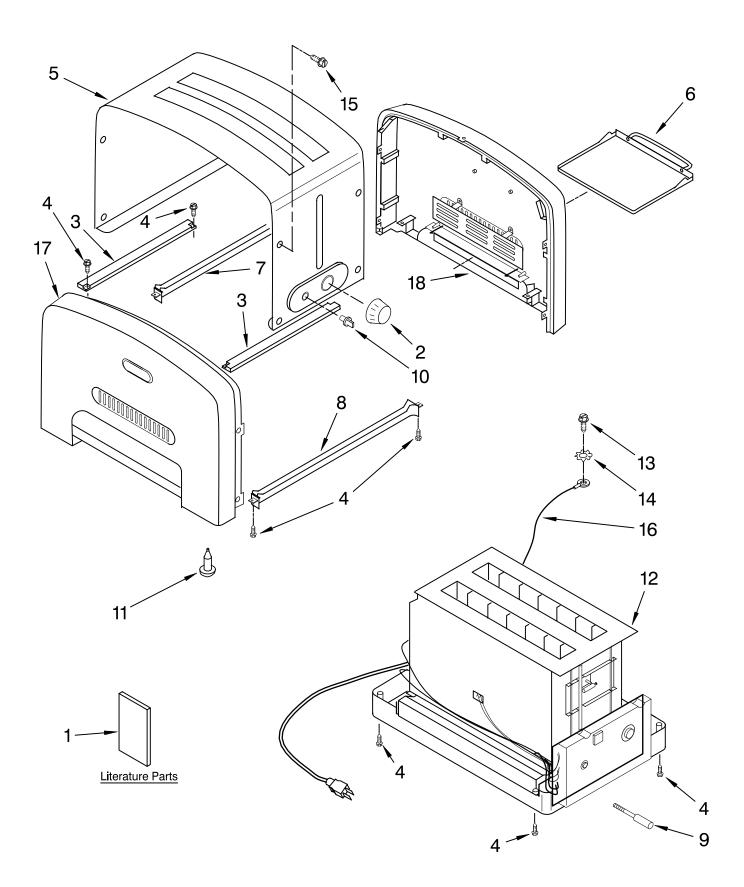

HOUSING PARTS

For Models: KPTT780__0

Illus. No.	Part No.	DESCRIPTION
1 2 3 4 5	8204567 8212132 4176839 4176737 4176831 4176747	Literature Parts Guide, Use & Care Repair Parts List Knob, Darkness Support Screw Wrap Assembly (Includes Items
6 7	4176814 4176742 4176743 4176744	2 & 10) Tray, Crumb Bridge, Rear Pearl Metallic Empire Red Tangerine
8	4176745 8212164 4176738 4176739	Cobalt Blue Nickel Pearl Bridge, Front Pearl Metallic Empire Red
9 10 11 12	4176740 4176741 8212163 4176832 4176838 4176837 4176746	Tangerine Cobalt Blue Nickel Pearl Arm, Lifter Knob, On/Off Foot, Rubber Chassis (Includes Power Cord, Base,
13 14 15 16 17	4176829 4176830 4176828 4176840	Control Boards, & Heating Elements) Screw, Grounding Lock Washer Screw, Wrap Wire, Ground Panel Assembly (Left) (Includes Badge &
18	4176749 4176750 4176751 4176752 8212160	Vent) Pearl Metallic Empire Red Tangerine Cobalt Blue Nickel Pearl Panel Assembly (Right) (Includes Badge &
	4176815 4176816 4176817 4176818 8212162	Vent) Pearl Metallic Empire Red Tangerine Cobalt Blue Nickel Pearl